


ATrack AT5 GPS - Quick Installation Guide


STEP #1 The basic installation consists of three wires:

- Red** connect to constant power source
- Yellow** connect to power that goes on and off along with the ignition of the vehicle
- Black** connect to the vehicles ground

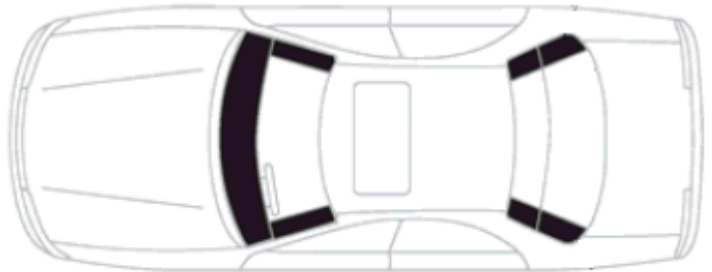

Mount GPS antenna **ANYWHERE** in the shaded areas **NOT** covered by any Metal facing the sky

STEP #2 Connect GPS & GSM antennas. The “GPS” lettering on antenna **MUST** be facing UP to the sky!
The “GSM” antenna should be placed 1 meter away from tracker.

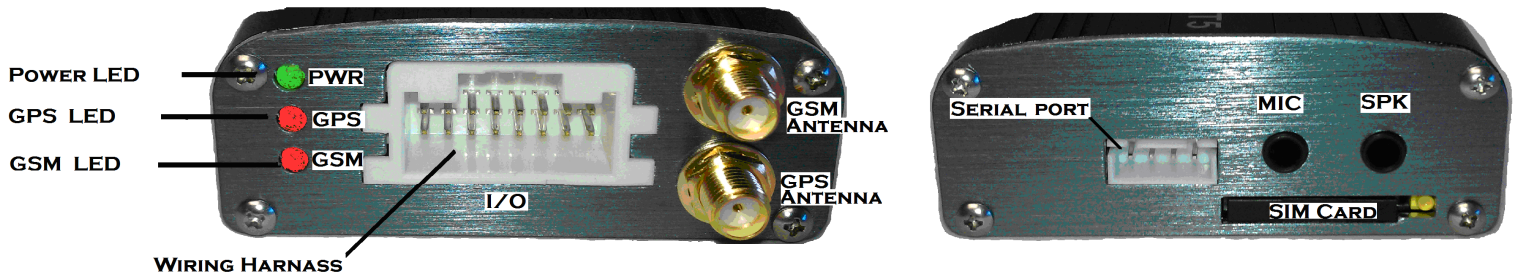

STEP #3 After all wiring is connected to the unit, antennas have been connected, and the vehicle is outside, not in a parking garage or under any metal roof, awning, or enclosure you will need to check the LED light indicators status. This is very important before proceeding. LED lights should be as follows when unit is ready to be tested and start tracking.

GSM 2 quick red blinks, means GSM module & GPRS are connected and locked to the network.

1 slow blink means no connection to GSM network or No SIM card in unit.

GPS Blinking will stop & stay lit constant when GPS module has valid data and locked onto satellites’.

Power Should stay lit constant.

***Note: GPS module could take 5 minutes to acquire & lock onto all satellites [LED will go out]

STEP #4 After all LED light indicators are confirmed to be showing the correct status you will need to take the vehicle for two short test trips. Each trip must be 1/2 mile or longer, and the ignition must be turned off for 30 seconds or longer in between trips.

STEP #5 After steps 1 - 4 are completed [or if you have any questions] call 305-525-2727 or email John@MotoMon.com to notify us installation steps have been completed. We will confirm the GPS unit is tracking. You will then get an email with your username, password & login instructions.
Congratulations and welcome to the world of GPS tracking!!!